Load monitors - GAMMA series

- Power factor monitoring (cosφ) in 1- or 3-phase mains
- Multifunction
- Fault latch
- Recognition of disconnected consumers
- Suitable for VFI (10 to 100Hz)
- Supply voltage selectable via power modules
- 2 change-over contacts
- Width 22.5mm
- Industrial design

Technical data

1. Functions

Load monitoring $(\cos \phi)$ in 1- or 3-phase mains with adjustable thresholds, timing for start-up supression and tripping delay separately adjustable and the following functions (selectable by means of rotary switch) OVER Overload monitoring OVER+LATCH Overload monitoring with fault latch Unterload monitoring UNDER UNDER+LATCH Unterload monitoring with fault latch Monitoring the window between WIN Min and Max WIN+LATCH Monitoring the window between

Min and Max with fault latch

Adjustment renge

of the corresponding threshold

2. Time ranges

Subject to alterations and errors

	Aujustinent lange	
Start-up suppression time:	1s	100s
Tripping delay:	0.1s	40s

3. Indicators Green LED ON:

indication of supply voltage Green LED flashes: indication of start-up supression time Yellow LED R ON/OFF: indication of relay output Yellow LED I=0 ON/OFF: indication of disconnected consumers Red LED ON/OFF: indication of failure of the corresponding threshold indication of tripping delay

Red LED flashes:

4. Mechanical design

Self-extinguishing plastic housing, IP rating IP40 Mounted on DIN-Rail TS 35 according to EN 60715 Mounting position: any Shockproof terminal connection according to VBG 4 (PZ1 required), IP rating IP20 max. 1Nm

Tightening torque: Terminal capacity:

- 1 x 0.5 to 2.5mm² with/without multicore cable end
- 1 x 4mm² without multicore cable end
- 2 x 0.5 to 1.5mm² with/without multicore cable end
- 2 x 2.5mm² flexible without multicore cable end

5. Input circuit Supply voltage:

12 to 400V AC

Tolerance:

Rated frequency:

Rated consumption: Duration of operation: Reset time: Residual ripple for DC: Drop-out voltage: Overvoltage category: Rated surge voltage:

terminals A1-A2 (galvanically separated) selectable via power modules TR2 according to specification of power module according to specification of power module 2VA (1.5W) 100% 500ms

>30% of the supply voltage III (in accordance with IEC 60664-1) 4kV

6. Output circuit

2 potential free change-over contacts		
Rated voltage:	250V AC	
Switching capacity:	750VA (3A / 250V AC)	
If the distance between the devices is less than 5mm!		
Switching capacity:	1250VA (5A / 250V AC)	
If the distance between the devices is greater than 5mm		
Fusing:	5A fast acting	
Mechanical life:	20 x 10 ⁶ operations	
Electrical life:	2 x 10 ⁵ operations	
	at 1000VA resistive load	
Switching frequency:	max. 60/min at 100VA resis	
	max. 6/min at 1000VA resis	

Overvoltage category: Rated surge voltage:

7. Measuring circuit

Measured variable: Measuring-input voltage: 1-phase mains

3-phase mains Overload capacity: 1-phase mains 3-phase mains Input resistance: Measuring-input current:

Overload capacity: Input resistance: Switching threshold cos ϕ Max: Min: Overvoltage category: Rated surge voltage:

8. Accuracy

Base accuracy: Frequency response: Adjustment accuracy: Repetition accuracy: Voltage influence: Temperature influence:

9. Ambient conditions

Ambient temperature:

Storage temperature: Transport temperature: Relative humidity:

Pollution degree: Vibration resistance:

Shock resistance:

G2CM400V10AL20



$\pm 5\%$ (equivalent to 5% at $\cos \varphi = 0.8$) ≤5% (at cosφ =0.8) $\pm 1.8^{\circ}$ (equivalent to 1.8% at $\cos \varphi = 0.8$) ≤0.1% / °C -25 to +55°C (in accordance with IEC 60068-1) -25 to +40°C (in accordance with UL 508) -25 to +70°C -25 to +70°C 15% to 85% (in accordance with IEC 60721-3-3 class 3K3) 3 (in accordance with IEC 60664-1) 10 to 55Hz 0.35mm (in accordance with IEC 60068-2-6) 15a 11ms

(in accordance with IEC 60068-2-27)

Release 12/08

istive load istive load (in accordance with IEC 60947-5-1) III (in accordance with IEC 60664-1) 4kV

AC Sinus (10 to 100Hz)

40 to 415V AC (max. 300V against ground) terminals L1i-L2/L3 3~ 40/23 to 415/240V. terminals L1i-L2-L3

500V 3~ 500/289V ≥1MΩ 0.5 to 10A terminals I 1i-I 1k (for I>8A distance >5mm) 12A permanently $5m\Omega$

0.2 to 1.0 0.1 to 0.99 III (in accordance with IEC 60664-1) 4kV

Functions


When the supply voltage U is applied, the output relays switch into on-position (yellow LED R and LED I=0 illuminated) and the set interval of the start-up suppression (START) begins (green LED U flashes). Changes of the measured power factor $(\cos\phi)$ during this period do not affect the state of the output relay. After the interval has expired the green LED is illuminated steadily.

For all the functions the LEDs MIN and MAX are flashing alternating, when the minimum value for the measured power factor was chosen to be greater than the maximum value.

Overload monitoring (OVER, OVER+LATCH)

When the measured power factor exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relays switch into off-position (yellow LED R not illuminated). The output relays again switch into on-position (yellow LED R illuminated), when the measured power factor falls below the value adjusted at the MIN-regulator (red LED MAX not illuminated).


If the fault latch is activated (OVER+LATCH) and the measured power factor remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured power factor falls below the value adjusted at the MIN-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

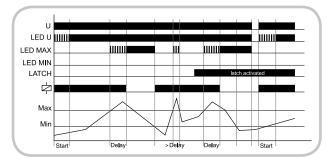

Underload monitoring (UNDER, UNDER+LATCH)


When the measured power factor falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relays switch into off-position (yellow LED R not illuminated). The output relays again switch into on-position (yellow LED R illuminated), when the measured power factor exceeds the value adjusted at the MAX-regulator.

If the fault latch is activated (UNDER+LATCH) and the measured power factor remains below the MIN-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured power factor exceeds the value adjusted at the MAXregulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

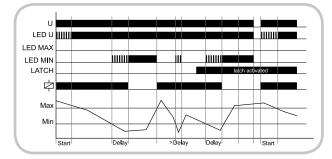


Window function (WIN, WIN+LATCH)

The output relays switch into on-position (yellow LED R illuminated) when the measured power factor exceeds the value adjusted at the MIN-regulator. When the measured power factor exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relays switch into off-position (yellow LED R not illuminated). The output relays again switch into on-position (yellow LED R illuminated) when the measured power factor falls below the value adjusted at the MAX-regulator (red LED MAX not illuminated). When the measured power factor falls below the value adjusted at the MAX-regulator falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins again (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relays switch into off-position (yellow LED R not illuminated).

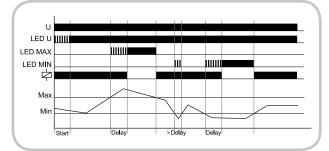


If the fault latch is activated (WIN+LATCH) and the measured power factor remains below the MIN-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured power factor exceeds the value adjusted at the MIN-regulator. If the measured power factor remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured power factor remains above the MAX-value longer than the set interval of the tripping delay, the output relays remain in the off-position even if the measured power factor falls below the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relays switch into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

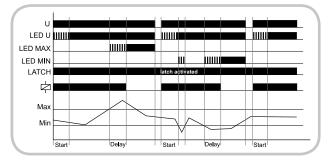

Recognition of disconnected consumers


When the current flow between L1i and L1k is interrupted (yellow LED I=0 illuminated) and no fault has been stored the output relays switch into on-position resp. remain in on-position (yellow LED R illuminated).

When the current flow is restored, the measuring cycle is restarted with the set interval of the start-up suppression (START).

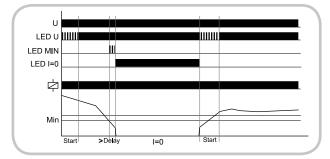

Connections

 Connected to 3~ 400V mains with power module 24V AC without fault latch

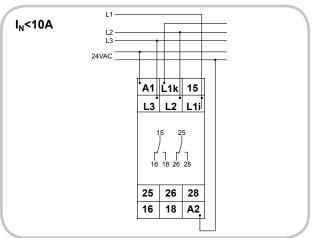


I_N<10A

Connected to 1~ 230V mains with power module 230V AC

without fault latch

Connected to 3~ 400V mains with power module 400V AC and fault latch

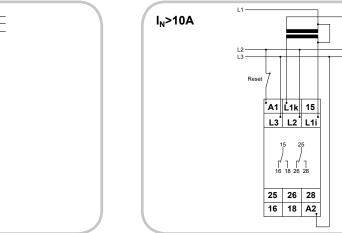

Connected to 3~ 400V mains with power module 400V AC and fault latch

A1 L1k 15

25 26 28

16 18 A2


L1 -

L2 -L3 -

Reset

I_N<10A

Dimensions

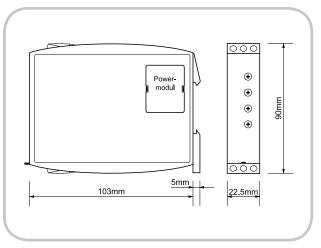

G2CM400V10AL20

Notes

www.tele-online.com

